

System 70 01 799 00

=&gt; €/€

generator/electronic ignition for [DKW SB200](#) and Sport 250 as well as Block 200-300

**Please note:** DKW used 2 different crankshafts in SB 200. Relative to the dynamo different in size of threading for rotor fastening nut (M 14 and M 16). Please indicate what nut size you need when ordering.



Magnet based generator with integrated solid state ignition. Output at 12V/100W DC (at express demand 6V/75W option available). Replaces old dynamo, points, centrifugal governor, ignition coil. You may [drive without a battery](#), if you want. Ignition ist static as with the modern carburants and the high tension ignition there is no need to have reduced advance at startup. Rotor weight is now 2kg in place of formerly 4. This reduces wear on bearings and gives smooth driving.

not for SB 200 with stock dynastart

advantage over original system

- all parts are new
- more light output
- very stable ignition with solid spark
- better starting, better fuel burning
- no wear anymore on points
- no delicate centrifugal governor

documentation

- [assembly instructions](#)
- [wiring diagram](#)
- [parts in the pack \(foto\)](#)
- [information on driving without battery](#)

Notes

- There were **two different crankshafts**, different in size of fastening nut for rotor. (thread 14 and thread 16).
- **Please specify when ordering thread size. If no indication is given to us, we deliver M16. If you than find you need 14 you have to [order this nut](#) as an individual part.**

photos

- [engine with the system](#)
- [view into the cover](#)
- [view at mounted new rotor](#)
- [further picture of rotor](#)
- [view at mounted new stator](#)
- [further picture of stator](#)

**If you can install and time a stock ignition and possess basic mechanical skills, you can install a VAPE system!**

**If you never have worked on your ignition, better have it done by someone who knows.**

VAPE can not monitor the compliance to those instructions, nor the conditions and methods of installation, operation, usage and maintenance of the system. Improper installation may result in damage to property and possibly even bodily injury. Therefore we assume no responsibility for loss, damage or cost which result from, or are in any way related to, incorrect installation, improper operation, or incorrect use and maintenance. We reserve the right to make changes to the product, technical data or assembly and operating instructions without prior notice.

**Please read these instructions fully and carefully before starting work on your motorcycle**

Please bear in mind that [any modification of the material as well as own repair attempts which have not been agreed with VAPE may result in a loss of warranty. Do not cut off wires. This leads to a loss of reverse polarity protection and often results in damage to electronics.](#) Also, please take note of the information provided on the information page for this system. Check that what you have bought really corresponds to the motorcycle you have. Wrong ignition settings may damage your engine and even hurt you during kickstart (violent kickbacks). Be careful during the first test runs. If needed change settings to safer values (less advance). During assembly check carefully that the [rotor \(flywheel\) does not touch the stator coils or anything else](#), which may happen due to various circumstances and lead to severe damage.



**IMPORTANT:**

#### **Designated use**

This system is designated to replace stock dynamo/alternator & ignition systems in vintage and classic motorcycles [whose engine characteristics have not been modified aftermarket](#). This system is not a tuning system and it will not bring significant increases in engine output. It does however significantly enhance roadworthiness and comfort by offering better lighting, better function of side indicators and horn and, compared with the aging stock systems, increased reliability. As our system does not tamper with engine characteristics it does not increase emission of gaseous pollutants and noise. In most cases emission of pollutants should even be reduced due to better combustion. If used as designated the system therefore will not normally infringe the existing legal status of the motorcycle (this statement is valid for Germany, for other countries, please check locally against your road licensing regulations). This system is not suitable for use in competition events. If used other than the designated way, warranty will be voided and it might well be that you do not obtain the desired results or, worst you loose legal

|  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|--|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>roadworthiness.</p> <p><b>The charging system is only suitable for use with rechargeable 12V (6V systems 6V) lead-acid batteries</b> with liquide electrolyte or sealed lead-acid batteries, AGM, Gel. <a href="#">It is not suitable for use with nickel-cadmium, nickel-metal-hydride, lithium-ion or any other types of recharchable or non rechargeable batteries.</a></p> <p>This is a <a href="#"><b>replacement system and not a copy of the stock material</b></a>. The parts in this system therefore look different and might fit differently (notably ignition coil and regulator) requiring some adaptation by you.</p> <p><b>During assembly imperatively start with assy of engine based parts</b> to see that those really fit before you start fitting the external parts. In many cases customers assemble those first and thereby often <a href="#">modify them in breach of warranty</a> which renders them unfit for renewed sale. <a href="#">Replacing old ignition systems is not a matter of taking something from a supermarket shelf as there have been very many types, versions and possibly unknown aftermarket modifications which harbour plenty of room for error.</a></p> <p>Our systems are <a href="#">NOT tested for use with third party electronic devices (such as GPS, mobile phones, LED lighting etc)</a>and may <a href="#">cause damage to such parts</a>. Possibly existing <a href="#">electronic tachometers</a> will not work with the new system. Read our <a href="#">information for suitable solutions</a>. Possibly existing safety switches and electronic valve controls are not supported. It might be that your motorcycle was originally equipped with an ignition that did limit top speed for legal reasons. The new system does not have such a facility, so check your legal situation beforehand.</p> <p>If you have no expertise for the installation have it done by an expert or at a specialist's workshop. Improper installation may damage the new system and your motorcycle, possibly even lead to bodily harm.</p> <p>Before you order a system, please check whether a <a href="#">puller tool</a> for the new rotor is included in the kit. If not, better order it at the same time. You might want to order light <a href="#">bulbs</a>, <a href="#">fuse</a>, horn, <a href="#">flasher unit</a> etc.</p> <p>Never use anything other than the recommended puller tool to pull the new rotor again. Damage to the rotor as a result of use of other tools or methods is not covered by warranty.</p> <p>The rotor is sensible to blows (including during transport). Before assembly, please always check for damage (on rotor without magnet plastification try to push the magnets aside with your</p> |
|--|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|                                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                                   | <p>fingers). After impact the glued in magnets might have broken loose, sticking to the rotor solely by magnetic force, so that one does not notice right away. During engine run the damage would be considerable. Before placing the rotor onto the engine, please make sure that its magnets have not collected any metal objects such as small screws, nuts and washers. That equally would lead to severe damage.</p> |
|  <b>Internet</b> | <p><b>If you have access to the Internet, best view those instructions online.</b> You get larger and better pictures by clicking onto them and possibly updated information. System list at <a href="http://www.powerdynamo.biz">http://www.powerdynamo.biz</a></p>                                                                                                                                                       |



**You should have received those parts:**

- rotor / fastening nut
- pre-assembled stator unit
- regulator/rectifier
- CDI ignition coil / ht-cable
- fastening screws



To pull the new rotor again, you will need the puller tool M27x1,25 (part 99 99 799 00) Not included.

**Note:** Never use a claw puller, a hammer or any other device, that will shake the magnets off.

Make sure your motorcycle rests securely, preferably on an elevated work bench and that you have good access to the dynamo side of the engine. Disconnect the cables from your old dynamo and remove them. Pull the rotor off, you will need a special DKW puller screw for this.



Take the old stator from the rear DKW cover plate.

This plate is the only part, that will be needed further on. It is advisable to enlarge the cable exit hole to 13mm and put the enclosed grommet in for cable protection.

Take the woodruff key from the crank. You will not need it any more. Please do not forget to do so, otherwise you will have trouble later on the assembly. (Remark: This woodruff key does not actually hold your rotor on the shaft, this is done by the cone. It simply guides to the correct setting which will now be otherwise achieved.)



Place the lower adapter (the thicker aluminium part with the 6 threaded holes M5 on the bottom) onto the old rear cover plate. Screw it down with the enclosed countersunk screws M5x12.

It is very important to mount it as shown in the picture left.



Now you have to screw down this unit on the engine with the 3 countersunk screws M6x40.





The adapter has two parts, the lower screwed down to the cover plate of the engine and the upper. The upper plate will carry the stator holder.



For screwing down the upper adapter, you have to lift-off the stator coil a little to gain access.

Remove the 3 fixing screws which hold the stator coil to its base. Now you can lift the coil a little away from the ground plate. So as the mounting holes on the ground plate become accessible. Don't pull out the cables.

Take care not to damage the paint insulation!

Note: The left picture does not show the correct position of the plate. The mounting screws are normally nearly vertical as seen in the picture below.

Lead the cable from the front through the cable exit hole (with the grommet) to the rear side.

Put the upper adapter plate with the stator plate and the stator hanging loosely on the lower adapter. Screw finally down the stator plate and the upper adapter plate to the lower adapter with the countersunk screws M6x30.



Now you have to set the new stator onto its carrier.

For this, push the coil gently down and pull at the same time at the wire from rear (cable exit opening) - little by little until the unit sits properly. At the end, the coil will sort of snap in sharply, even with some noticeable click. If it sets down rather softly, you can bet there is a wire underneath.

Screw down the coil with the 3 screws M4x30.



Have a look at the new rotor. You will find on its circumference a small lasered in line (older versions red point). Also on the circumference of the adapter plate you will find a red line marking near the wire exit. These are ignition markings.



Remove the spark plug to ease turning the crank. Bring the piston into ignition position.

The SB manual gives a value of 5.5mm BTDC. This value now might be a little less (we suggest 4.5) given the modern fuels and the high power ignition.

You find TDC and BTDC position best with the head off.



Now - with crank in ignition position - press the rotor onto the crank in such a way that the marking on the rotor aligns with the marking on the stator setup.

If there is any change in the crank's (ignition) position, you have to start again.

(picture shows older version of marking)



In that position fasten the rotor carefully with the enclosed tubular nut M16 (or M14, depending on model).

In case of the M14, place the supplied large washer 18x25x1 under the nut to make sure it presses against the bottom of the puller hole and not with its hexagon part against the top of the rotor. If needed install the second washer.

#### **Note on possible installation problems:**

On these old engines, you never know exactly what to expect. Previously experienced the following issue:



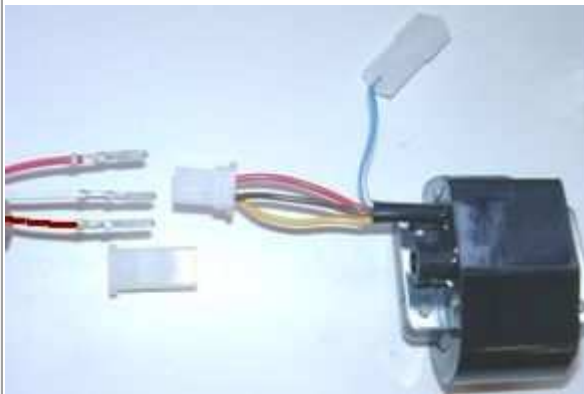




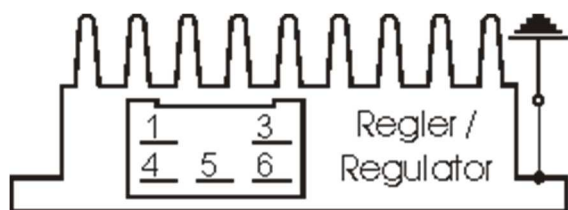
It seems there are different versions of rear DKW plates. One version interferes in the needed position a little with a stud on the block. This problem happened e.g. with the customer who did sent us a good [installation report \(click here\)](#). Here, a little material had to be removed from the stud (see picture).

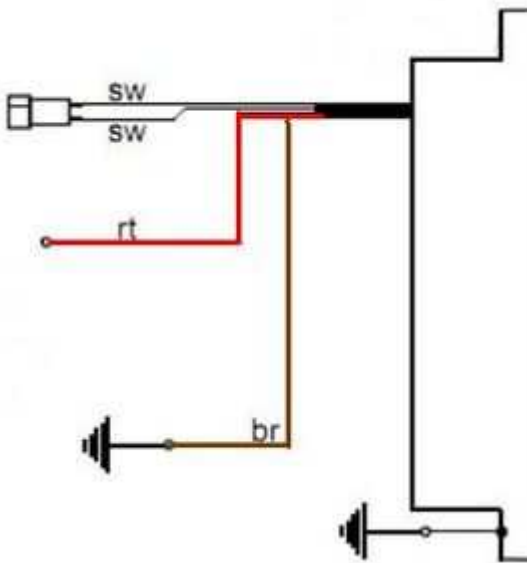



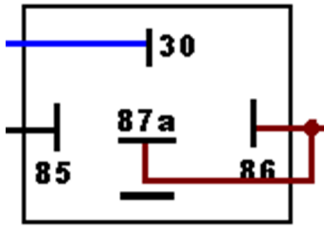
Place the spark plug back.

Fasten the new rectifier/regulator and the new ignition coil on a convenient place. Fasten the wiring to the frame.

|                                                                                                                                                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Connect the parts as shown in the respective wiring diagram!</p> <p>For our <a href="#">standard DC regulator (95 22 699 06)</a>, use the <a href="#">wiring diagram 73ir12</a>:</p> <p>For our <a href="#">DC regulator with built in smooting condenser (73 00 799 50)</a>, use additional the <a href="#">wiring diagram reg_102</a>:</p> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <p>* To facilitate wire exit through the often small openings in the engine casing, the plastic plug of the generator's wiring that leads to the ignition coil have not been put onto the wire terminal. You should place the plug there only once all has been properly installed on the engine side.</p>                                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|                                                                                                                                                                                                                                                              | <p>Look for the ignition coil with its female plug and the three wires (red, brown and yellow).</p> <p>Put the provided 4-position plug housing onto this plug and insert the three wires (red, brown and white) from the generator. Make sure that the terminals engage securely in the housing and that you connect:</p> <ul style="list-style-type: none"> <li>• red to red</li> <li>• brown to brown</li> <li>• white from the generator to yellow of the ignition coil</li> </ul> |

|                                                                                                                                        |                                                                                                                                                                                                                                                                                                                                                                                                              |
|----------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                                                                        | Should you need (or want) to get the terminals out of the plug housing again, enter a paper clip from front next to the terminals and push the little barb aside. Than pull the wire out.                                                                                                                                                                                                                    |
| * <b>Connecting VAPE alternator to lighting circuit (via regulator):</b>                                                               |                                                                                                                                                                                                                                                                                                                                                                                                              |
|                                                       | <p>The 2 black wires running from the stator coil carry the voltage for lights, horn, flashers etc. They have nothing to do with ignition.</p> <p>This voltage (something between 10 and 50 volts AC) has however to be stabilized (regulated) and for most uses rectified into direct current (DC) as it primarily is alternating current (AC).</p> <p><b>For this we offer 2 different regulators:</b></p> |
|                                                       | <p><b>Attention:</b> Any <b>confusion between plus and minus</b> (with the DC versions) leads to <b>immediate destruction of the regulator</b>. This will not constitute a warranty case as it is <b>negligence!</b> One can recognize a burnt regulator mostly by its sharp smell.</p>                                                                                                                      |
| * <b>Regulator type 1:</b> with <a href="#">standard DC regulator (95 22 699 06)</a> , use the <a href="#">wiring diagram 73ir12</a> : |                                                                                                                                                                                                                                                                                                                                                                                                              |
| *                                                   | <p>The new regulator/rectifier has a compact plug with 6 positions, of which <u>one</u> is not used. A female plug cover fitting to this plug is delivered. Into this female plug you have to insert the following wires (which have terminals that snap into the plug):</p>                                                                                                                                 |
| The two black cables leading from the generator ...                                                                                    | ... connect to pins 1/4 of the new regulator (from there equally black wires lead inside the unit). It does not matter which wire connects to which of the both terminals (1/4) as they carry alternating current.                                                                                                                                                                                           |
| The new brown cable with the round eye terminal ...                                                                                    | ... connects pin 3 of the regulator unit (from there equally a brown wire goes inside the unit) with the negative pole of the battery or (in case you drive without battery) to ground (chassis).                                                                                                                                                                                                            |
| The new red cable with the round eye terminal ...<br><br><p><b>Take care:</b><br/>Wrong polarity will damage the electronics!</p>      | ... connects to pin 5 of the new regulator (from there equally a red wire goes inside the unit). Here your regulated positive voltage comes out to connect to battery plus, or (in case you drive without battery) to the voltage input terminal of the main switch (ignition lock, German bikes: pin 51/30).                                                                                                |
| Make sure that you have a <b>15A-fuse</b> between battery and vehicle circuitry.                                                       |                                                                                                                                                                                                                                                                                                                                                                                                              |

|                                                                                                                                                                                                                                                                                                                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>The green/red wire at pin 6 of the new regulator ...</p> <p><b>Remark:</b><br/>Until November 2007 this wire has been a single wire outside the compact plug.</p>                                                                                                                                                           | <p>... is for the charge control light. You connect there the wire that formerly did run from the control light to the original regulator.</p> <p>Sure that this control only functions with a battery present. Should you drive without battery but still connect the wire, you will see that the light glows even as the generator generates voltage. So without battery, do not connect it.</p>                                                                                                |
| <p>The charge light control function is based on a transistor switch and is an additional function. Even if that should fail, the regulator might still be in ok working condition. Simple check: have the engine running, turn lights on, disconnect the battery. If you have bright lights the unit is ok.</p>               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <p>* <b>Regulator type 2:</b> with <a href="#">DC regulator with built in smooting condenser (73 00 799 50)</a>, use additional the <a href="#">wiring diagram reg 102</a>:</p>                                                                                                                                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|                                                                                                                                                                                                                                              |  <ul style="list-style-type: none"> <li>the 2 black (sw) wires are the AC input from the alternator (as it is AC it does not matter which black to which black)</li> <li>the red (rt) wire is the 12V DC output plus</li> <li>the brown (br) wire is ground, internally connected to housing</li> </ul>                                                                                                        |
| <p>Remains the blue (sometimes blue/white) wire at the ignition coil. This is the kill (cut-off) wire.</p> <p><b>Connected to ground - it will stop ignition!</b></p> <p><b>Note:</b><br/>Should you experience ignition failures, disconnect as a first measure this blue wire. In many cases that will permit you to get</p> | <p><b>Switch off via separate kill switch</b><br/>(when driving without battery):<br/>The relay will not be fitted. The blue(/white) cable of the ignition coil will be connected to a kill switch, closing against ground (<a href="#">a button at the handlebars</a>). Or you mount an ignition lock that has a facility to connect against ground when in OFF position.</p> <p><b>Battery method:</b><br/>Connect the brown relay wire to good ground. Lead the longer black wire from the</p> |

|          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|          | <p>mobile again (particulars see: <a href="#">technical help</a>)!</p>                                                                                                                                                                                                                                                                                                                                                                                                          | <p>relay to the wire that did run previously to a pin carrying voltage when the switch is on (in German bikes: pin 15) and connect it there.</p> <p>Connect the blue wire from pin 30 of the relay to the blue(/white) wire at the new ignition coil.</p> <p>should your battery fail on the road, just disconnect that blue wire and your bike will run again (it will now only not stop by switching off).</p> |
|          | <p><b>Relay wiring</b><br/>(if used):</p>                                                                                                                                                                                                                                                                                                                                                      | <p>The brown wire with the ring terminal from pins 87a und 86 goes to ground.</p> <p>The black wire from pin 85 goes to a main switch terminal carrying voltage if switched on.</p>                                                                                                                                                                                                                              |
| <p>*</p> | <p>Screw the high tension (ignition) cable ...</p> <p>Please <b>do not use</b> any spark amplifying cables, such as "Nology supercables" or "hot wire". This will disturb the system and possibly damage it.</p>                                                                                                                                                                                                                                                                | <p>... into the ignition coil and pull over the rubber seal before mounting the coil (it will be easier).</p> <p>Please do use the cable arriving with the pack and not any old cable.</p>                                                                                                                                                                                                                       |
|          | <p>You will do yourself a favour to treat your bike to new spark plugs and spark plug sockets (preferably some between 0-2kOhm). Plenty of problems are to be traced back to "apparently good" (even completely "brand-new") sparks plugs, terminals and cables.</p> <p><b>Do not use</b> spark plugs with an intern suppression resistor. NGK (e.g.) offered such spark plugs coded with an "R" (for resistor).</p>                                                            |                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <p>*</p> | <p>Finally - <b>and before installing the battery and before the first kickstart</b> - please re-check carefully all connections and fitments against the wiring diagram. Do check battery and light bulbs for correct voltage (12V).</p> <p>Should something not work, please consult our <a href="#">trouble-shooting guide</a> on our homepage. As a first step disconnect the blue wire from the coil and re-test.</p>                                                      |                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <p>*</p> | <p><b>IMPORTANT:</b> During <b>crank shaft repair</b> the dynamo shaft is often machined and gets shorter. The result is a rotor sitting lower, possibly touching now with its rivets the stator coil. The result is a destroyed stator and ignition failure.</p> <p>For <a href="#">more detail and how to check see (online) here</a>.</p>                                                                                                                                    |                                                                                                                                                                                                                                                                                                                                                                                                                  |
|          | <p><b>Important safety and operating information</b></p> <p>Safety first! Please observe the <a href="#">general health and safety regulations motor vehicle repair (MVR)</a> as well as the safety information and obligations indicated by the manufacturer of your motorcycle.</p> <p>The timing marks on the material are for general guidance only during first installation. Please check after assembly by suitable means (stroboscope) that settings are correct to</p> |                                                                                                                                                                                                                                                                                                                                                                                                                  |

|   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|   | prevent damage to the engine or possibly even your health. You alone are responsible for the installation and the correctness of settings.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| # | <p><u>Ignition systems generate high tension!</u> With our material right up to 40,000 Volts! This may, if handled carelessly, not only be painful, but outrightly <u>dangerous</u>. Please do keep a safe distance to the electrode of your spark plug and open high tension cables. Should you need to test spark firing, hold the spark plug socket securely with some well insulating material and push it firmly to solid ground of the engine block.</p> <p>Never pull sparkplug caps when engine is running. Wash your vehicle only with engine at standstill and ignition off.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| # | Should you have received in the kit HT cables with a fixed rubber boot(which does not contain a resistor) you might have to use spark plugs with an inbuilt resistor (or replace the cap with one containing a resistor) to comply with your local laws.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| # | After installation, please <u>check tightness of all screws, even those preinstalled</u> . If parts get loose during run, there will be inevitably damage to the material. We pre-assemble screws only loosely.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| # | <p>Give the newly installed system a chance to work, <u>before you start to check and test values</u>, or what is worse apply changes to it.</p> <p>Our parts have been checked before delivery to you. You will not be able to check much anyway. <b>At any rate do refrain from measuring the electronic components (such as ignition coil, regulator and advance unit). You risk severe damage to the inner electronics there. You will not get any tangible results from the operation anyway.</b> Bear in mind that also your carburetor, your spark plugs and spark plug sockets (even if completely new) might be the reason for malfunction. The general experience with our systems is that the carburetor will have to be re-adjusted to lower settings. Should the system not start after assembly, first disconnect the blue (or blue/white) cut-off wire directly at the ignition coil (or in some cases advance unit) to eliminate any malfunction in the cut-off circuitry. Check ground connections carefully, make sure there is a good electrical connection between frame and engine block.</p> <p>In case of troubles, please consult our <a href="#">Knowledge Base</a> first before you send off the material to us for checking</p> |
| # | The spark of classic, points based ignition systems has with about 10,000 Volts comparatively little energy and looks therefore yellow and fat (which however makes it highly visible). The spark from our system is a high energy spark with up to 40,000 Volts and therefore is needle thin focused in form, and blue in colour, which makes it not so visible. Furthermore you get spark only at kick-start operated speeds and not by pushing the kick-lever down slowly with your hand (as you might get with battery based ignitions).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| # | Systems using a <a href="#">twin outlet ignition coils</a> have a few peculiarities. Please observe that during tests on one side, the other has either to be connected to an fitted spark plug or securely earthed/grounded. Otherwise there will be no spark on either side. Also with such open exits long and dangerous sparks may fly all over the coil.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |



|   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| # | Never do electric arc welding on the bike without completely disconnecting all parts containing semiconductors (ignition coil, regulator, advance) stator and rotor need not be taken off. The same is true for soldering. Before touching electronics disconnect the soldering iron from mains! <a href="#">Never use copper putty on spark plugs.</a>                                                                                                                 |
| # | Electronics are very sensitive to wrong polarity. After work on the system, do check correct polarity of the battery and the regulator. Wrong polarity creates short circuits and will destroy the regulator, the ignition coil and the advance unit. As a rule, wiring will always be colour to colour. Instances, where colour jumps between wires are expressly mentioned in our instructions.                                                                       |
| # | When you handle the new rotor, take care not to damage its magnets. Refrain from direct blows to the circumference of the rotor. <b>When transporting never put the rotor over the stator.</b> <a href="#">Observe our information relative to transport of the material.</a>                                                                                                                                                                                           |
| # | Do not use spark plug sockets with a resistance of more than 5kOhm. Better use 1 or 2kOhm ones. Bear in mind that spark plug sockets do age and thereby increase their internal resistance. Should an engine start up only when cold, a defective spark plug socket and/or spark plug is very probably the cause. In case of problems check high tension cables too. Never use carbon fibre HT-cables, never use so called "hot wires" which promise to increase spark. |
| # | It is a good idea to cover the rotor in a thin layer of oil to reduce the risk of corrosion.                                                                                                                                                                                                                                                                                                                                                                            |
| # | Never use a claw puller or a hammer to disengage the rotor. Its magnets might become loose in the event. We offer a special puller for disengaging the new rotor again (see assembly instruction)!                                                                                                                                                                                                                                                                      |
| # | Should the motorcycle not be in use for some longer period, please disconnect the battery (so existing) to prevent current bleeding through the diodes of the regulator. Though, even a disconnected battery will empty itself after a while.                                                                                                                                                                                                                           |
| # | Please do observe these remarks, but at the same time, don't be afraid of the installation process. Remember, that before you, thousands of other customers have successfully installed the system.<br><b><i>Enjoy driving your bike with its new electric heart!</i></b>                                                                                                                                                                                               |

