

System 71 75 999 00

=> €/\$



generator / electronic ignition for [Horex Resident](#)

Magnet based generator with integrated fully electronic ignition. Output at 12V/150W DC. Solid state ignition with own power supply from within the system. Replaces the original Noris dynamo and regulator, centrifugal governor and points. No changes on engine casing needed.

Technically capable to [run without battery](#).

advantages against the old system

- all parts are new
- fully electronic, solid state ignition with automatic ignition advance
- more light output (you may use [light bulbs 40/45W](#))
- very stable ignition with solid spark
- no wear anymore on points and centrifugal governor

documentation

- [assembly instruction](#)
- [wiring diagram of the new system](#)
- [parts in the pack \(photo\)](#)

Here you can see a short [video of the installation of one of our systems in a Horex Regina](#) (built 1954). The film has us Arne Bratland by the Norwegian [Norsk Horex Club](#) provided. Thank you very much for that!

photos

- [engine block with the new system](#)
- [mounted side cover](#)
- [base plate with stator coils](#)
- [extern parts hidden in the toolbox](#)

If you can install and time a stock ignition and possess basic mechanical skills, you can install a VAPE system!

If you never have worked on your ignition, better have it done by someone who knows.

VAPE can not monitor the compliance to those instructions, nor the conditions and methods of installation, operation, usage and maintenance of the system. Improper installation may result in damage to property and possibly even bodily injury. Therefore we assume no responsibility for loss, damage or cost which result from, or are in any way related to, incorrect installation, improper operation, or incorrect use and maintenance. We reserve the right to make changes to the product, technical data or assembly and operating instructions without prior notice.

Please read these instructions fully and carefully before starting work on your motorcycle

Please bear in mind that [any modification of the material as well as own repair attempts which have not been agreed with VAPE may result in a loss of warranty. Do not cut off wires. This leads to a loss of reverse polarity protection and often results in damage to electronics.](#) Also, please take note of the information provided on the information page for this system. Check that what you have bought really corresponds to the motorcycle you have. Wrong ignition settings may damage your engine and even hurt you during kickstart (violent kickbacks). Be careful during the first test runs. If needed change settings to safer values (less advance). During assembly check carefully that the [rotor \(flywheel\) does not touch the stator coils or anything else](#), which may happen due to various circumstances and lead to severe damage.



IMPORTANT:

Designated use

This system is designated to replace stock dynamo/alternator & ignition systems in vintage and classic motorcycles [whose engine characteristics have not been modified aftermarket](#). This system is not a tuning system and it will not bring significant increases in engine output. It does however significantly enhance roadworthiness and comfort by offering better lighting, better function of side indicators and horn and, compared with the aging stock systems, increased reliability. As our system does not tamper with engine characteristics it does not increase emission of gaseous pollutants and noise. In most cases emission of pollutants should even be reduced due to better combustion. If used as designated the system therefore will not normally infringe the existing legal status of the motorcycle (this statement is valid for Germany, for other countries, please check locally against your road licensing regulations). This system is not suitable for use in competition events. If used other than the designated way, warranty will be voided and it might well be that you do not obtain the desired results or, worst you loose legal

roadworthiness.

The charging system is only suitable for use with rechargeable 12V (6V systems 6V) lead-acid batteries with liquid electrolyte or sealed lead-acid batteries, AGM, Gel. [It is not suitable for use with nickel-cadmium, nickel-metal-hydride, lithium-ion or any other types of rechargeable or non rechargeable batteries.](#)

This is a [replacement system and not a copy of the stock material](#). The parts in this system therefore look different and might fit differently (notably ignition coil and regulator) requiring some adaptation by you.

During assembly imperatively start with assy of engine based parts to see that those really fit before you start fitting the external parts. In many cases customers assemble those first and thereby often [modify them in breach of warranty](#) which renders them unfit for renewed sale. [Replacing old ignition systems is not a matter of taking something from a supermarket shelf as there have been very many types, versions and possibly unknown aftermarket modifications which harbour plenty of room for error.](#)


Our systems are [NOT tested for use with third party electronic devices \(such as GPS, mobile phones, LED lighting etc\)and may cause damage to such parts](#). Possibly existing [electronic tachometers](#) will not work with the new system. Read our [information for suitable solutions](#). Possibly existing safety switches and electronic valve controls are not supported. It might be that your motorcycle was originally equipped with an ignition that did limit top speed for legal reasons. The new system does not have such a facility, so check your legal situation beforehand.

If you have no expertise for the installation have it done by an expert or at a specialist's workshop. Improper installation may damage the new system and your motorcycle, possibly even lead to bodily harm.

Before you order a system, please check whether a [puller tool](#) for the new rotor is included in the kit. If not, better order it at the same time. You might want to order light [bulbs](#), [fuse](#), horn, [flasher unit](#) etc.

Never use anything other than the recommended puller tool to pull the new rotor again. Damage to the rotor as a result of use of other tools or methods is not covered by warranty.

The rotor is sensible to blows (including during transport). Before assembly, please always check for damage (on rotor without magnet plastification try to push the magnets aside with your

	<p>fingers). After impact the glued in magnets might have broken loose, sticking to the rotor solely by magnetic force, so that one does not notice right away. During engine run the damage would be considerable. Before placing the rotor onto the engine, please make sure that its magnets have not collected any metal objects such as small screws, nuts and washers. That equally would lead to severe damage.</p>
	<p>If you have access to the Internet, best view those instructions online. You get larger and better pictures by clicking onto them and possibly updated information. System list at http://www.powerdynamo.biz</p>



You should have received those parts:

- pre-assembled base plate with stator coils and sensor
- rotor
- ignition coil
- regulator/rectifier
- advance unit
- cut-off relays
- ht-cable
- fastening screws

Please pay attention: the sensor is not screwed tight on the ground plate, it has to be adjusted by yourself.



To disengage the new rotor again, use only the puller M27x1,25 (part number: 99 99 799 00 - **Not provided!**).

Note: Never use a claw puller, a hammer or any other device, that will shake the magnets off.

Make sure your Horex rests securely, preferably on an elevated work bench and that you have good access to the dynamo side of the engine.

Disconnect your battery and take it out of the motorcycle. Note that you will install a 12Volts system, so you will either need a 12Volt battery or you use the option of driving without. You will still have to replace all lightbulbs to 12Volt ones. The horn may stay at 6Volts. For driving without battery, please observe our [information on driving without battery](#). If you choose to drive without the battery, you have to [mount an seperate kill-switch](#). Or you mount another ignition lock that cut-off against ground (from a motorcycle with magneto).



Disconnect the wires from the old dynamo and take it off.

Take the woodruff key from the crank pin. It will not be needed anymore and prevent assembly. If you forget this right at start, you will have to take the whole new unit off again to get access to the key.

Remove all 6Volt light bulbs from head-, tail-light and speedometer light. The old horn may stay.

For disconnecting the old rotor you need a steel pin (45-55mm length and 5.5-6mm diameter). Screw-off the fixing screw (M8 / 72.5mm length / 1.25 lead), take off the centrifugal governor, put the steel pin into the boring hole and screw-in the fixing screw again until the rotor disengages. Usually the rotor sticks very tight.



Now place the pre-assembled stator unit onto the engine and screw it tight with the two provided screws M8. Don't forget to use the washers.

**ATTENTION!**

Note the milling groove at the upper edge of the new base plate. Position it at the screw hole of the cover mounting screw.

**ADVICE:**

The base plate sits excentric to the edge of the engine. It looks a little strange - but it is accurate.

Please do not try to align one arc to the other - the side cover will not fit.



Take a look at the new rotor. On its circumference you will find a protrusion (nose). This will trigger the ignition impulse. The system calculates the ignition advance by using the time the nose needs to passing the sensor's core. So the ignition happens after the complete nose had passed-by the sensor.


Sadly the Horex is very sensitive to the ignition adjustment. With no-other motorcycle of that kind we did have so many troubles. Additional there are differences between the 250ccm and the 350ccm version (because of the different stroke of piston).

That is why you shall adjust the ignition timing by crank shaft **position of maximum advance!**

Please do not confuse *ignition advance* with *ignition retard*

- **Advance ignition** means the ignition point during the "normal drive" operating. (Farther to the TDC.)
- **Retard ignition** means the ignition point as the engine starts. (Nearer to the TDC.)

Place the rotor loosely onto the crank and check that it may move freely above the statorbase and the coils. Please check this very carefully. Additional it happens that shafts get shorter after repairwork on them, hence the need to check. **If it is so - talk to us!**

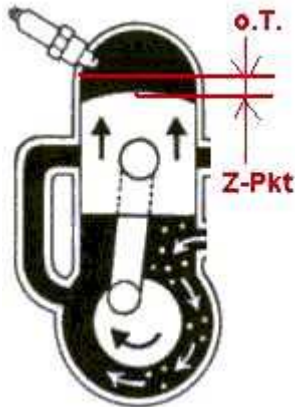

Take the spark plugs out and turn the rotor and bring at first the piston into TDC (top dead centre) position.

Then turn the rotor clockwise (usually the Horex turns anti-clockwise) until the piston has dropped at point of maximal advance: 43°.

As per factory informations have both Resident versions:

- advance ignition at 43°-45° BTDC
- retard ignition at 3°-5° BTDC

Based on the different strokes - differs too the distance between TDC and BTDC position.

Some engines got markings on the flywheel (visible through a spyhole) for TDC, advance and/or retard ignition. If it is not so at your Horex, you have to fix a (degree) gauge on your rotor or you use a special ignition setting gauge.

Further information you will find [here!](#)




If it is difficult to find 43°-45° BTDC, you may adjust it by TDC.

Cut out a paper strip of 39mm length, put it on right edge of the protrusion of the rotor and mark the right edge of the strip.

This are the recommended 43° away from the protrusion (this means TDC) and you can use that mark for the TDC setting.

If you've find the BTDC position take the rotor carefully off again without changing the crank's position and reset it onto the crank in such a way that the right edge of the rotor's nose covers the sensor's core about 1.2mm (**as shown below**). In that position fasten the rotor carefully with the original nut without changing the position of the rotor or the crank. If you've changed one of this positions, you have to redo the complete adjustment.

Theoretically you may alter this attitude as requested by take-off the rotor again and reset it in a desired angle.

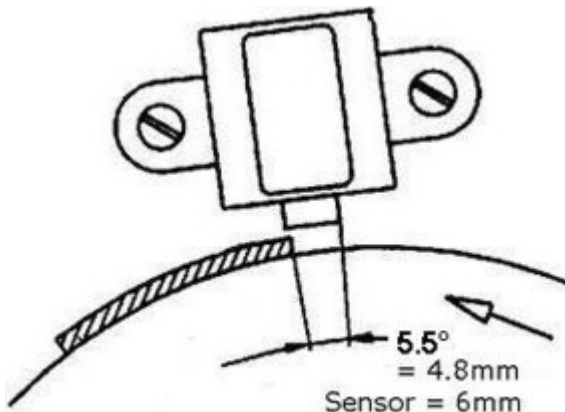

Screw down the rotor with the provided screw M8 and the washer.

Lead the cable out of the engine case.

Remains the gap between nose and sensor core. This might be about 0.4-0.5mm. Adjust it by loosening the 2 fastening screws and shifting the sensor.


Please fasten the screws very carefully, although if you did not adjust the gap. We pre-assemble the parts only loosely. A loose sensor may damage the protrusion (resp. the rotor).

Make sure please that the turning rotor does not affect the base plate.



If you put-on the cover, please check attentive that nothing is clamped beneath and the rotor does not affect the cover. It is very close.

You have to glue-in the small chromed cover. There is unfortunately no reasonable other possibility.

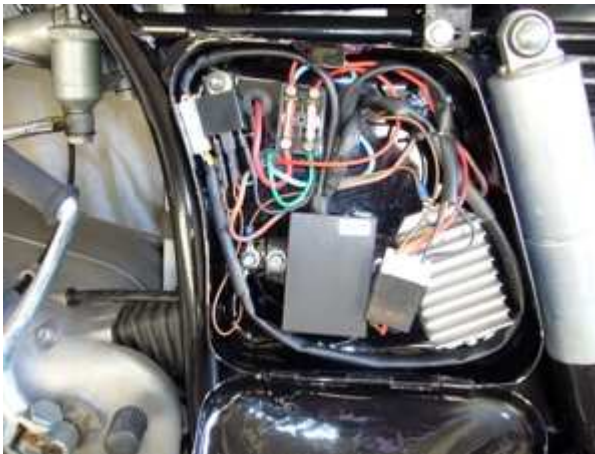

Now, the new ignition coil, the advance unit, the relay and the new regulator/rectifier have to find a convenient place on the motorcycle (e.g. inside the toolbox).

The regulator is well dimensioned and does not need to put it into direct airflow.



Any other convenient place is possible (e.g. by using a small holding plate - not supplied).

(Photo shows proposal on a *Horex Regina!*)



Another propositions of where to fix the parts.

(Photo shows proposal on a *Horex Regina!*)

Before installing the advance unit, have a look at the small switches at the advance unit. They activate different characteristics. There are 4 switches activating different advance curves.



In our view, the best curve for the Imperator is one activated by switches 2/3 to ON and 1/4 to OFF. It reaches max. advance at 3000rev/min.



If you position the switches 1/3 to ON and 2/4 to OFF the engine will reach max. advance at 3500rev/min.



As our systems may run without battery, you may use the space of an [empty battery case](#) to hide the components (regulator/rectifier and advance unit) on bikes without much of other hiding places.

Now run the cables along the frame!

Lead the new wiring the frame upwards underneath the tank. At this spot the wiring splits. Lead the two black cables to the regulator/rectifier and the remaining wires to the advance unit and further to the ignition coil. Fasten the cables using the supplied cable binders.

Connect the parts as shown in the respective wiring diagram!

For our [standard DC regulator \(95 22 699 06\)](#), use the [wiring diagram 91xr12](#):

For our [DC regulator with built in smooting condenser \(73 00 799 50\)](#), use additional the [wiring diagram reg_102](#):

* To facilitate wire exit through the often small openings in the engine casing, the plastic plug of the generator's wiring that leads to the advance unit have not been put onto the wire terminal. You should place the plug there only once all has been properly installed on the engine side.








Look for the advance unit with its female plug and the three wires (red, yellow and white).


Put the provided 4-position plug housing onto this plug and insert the three wires (red, yellow and white) from the generator. Make sure that the terminals engage securely in the housing and that you connect:

- red to red
- yellow to yellow
- white to white

Should you need (or want) to get the terminals out of the plug housing again, enter a paper clip from front next to the terminals and push the little barb aside. Than pull the wire out.
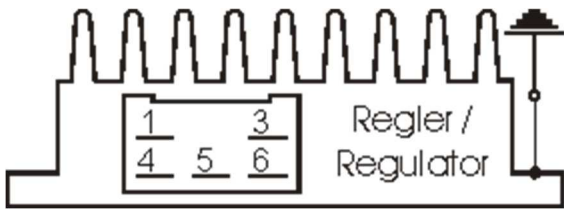
<p>* The second plug at the advance (a male plug) will be connected to the plug at the ignition coil. This two plugs can only be connected in one position. Note the changing colours:</p>	<ul style="list-style-type: none"> • red to red • white of the advance unit to brown of the ignition coil • blue/white of the advance unit to yellow of the ignition coil
<p>* Important! Never run the high tension cable(s) and the cable(s) of the advance unit closely in parallel (say in one shielding). This will trigger back coupling that disturbs ignition and might even damage the advance unit.</p>	
<p>* Connecting VAPE alternator to lighting circuit (via regulator):</p>	
	<p>The 2 black wires running from the stator coil carry the voltage for lights, horn, flashers etc. They have nothing to do with ignition.</p> <p>This voltage (something between 10 and 50 volts AC) has however to be stabilized (regulated) and for most uses rectified into direct current (DC) as it primarily is alternating current (AC).</p> <p>For this we offer 2 different regulators:</p>
<p> Attention: Any confusion between plus and minus (with the DC versions) leads to immediate destruction of the regulator. This will not constitute a warranty case as it is negligence! One can recognize a burnt regulator mostly by its sharp smell.</p>	
<p>* Regulator type 1: with standard DC regulator (95 22 699 06), use the wiring diagram 91xr12:</p>	
<p>* </p>	<p>The new regulator/rectifier has a compact plug with 6 positions, of which <u>one</u> is not used. A female plug cover fitting to this plug is delivered. Into this female plug you have to insert the following wires (which have terminals that snap into the plug):</p>
<p>The two black cables leading from the generator ...</p>	<p>... connect to pins 1/4 of the new regulator (from there equally black wires lead inside the unit). It does not matter which wire connects to which of the both terminals (1/4) as they carry alternating current.</p>
<p>The new brown cable with the round eye terminal ...</p>	<p>... connects pin 3 of the regulator unit (from there equally a brown wire goes inside the unit) with the negative pole of the battery or (in case you drive without battery) to ground (chassis).</p>
<p>The new red cable with the round eye terminal ...</p>	<p>... connects to pin 5 of the new regulator (from there equally a red wire goes inside the unit). Here your regulated positive</p>
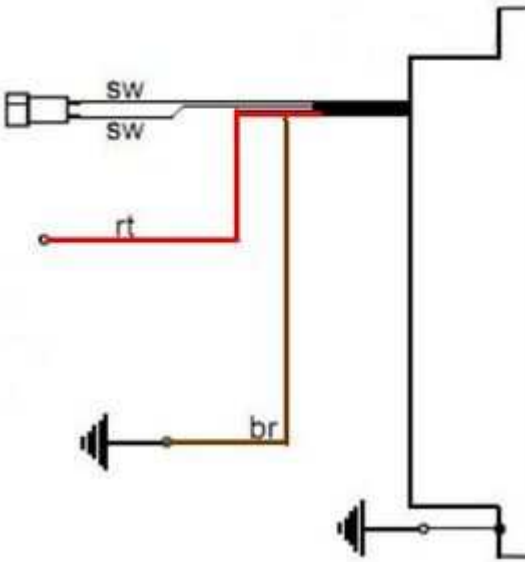
<p>Take care: Wrong polarity will damage the electronics!</p>	<p>voltage comes out to connect to battery plus, or (in case you drive without battery) to the voltage input terminal of the main switch (ignition lock, German bikes: pin 51/30).</p>
<p>Make sure that you have a 16A-fuse between battery and vehicle circuitry.</p>	
<p>The green/red wire at pin 6 of the new regulator ...</p> <p>Remark: Until November 2007 this wire has been a single wire outside the compact plug.</p>	<p>... is for the charge control light. You connect there the wire that formerly did run from the control light to the original regulator.</p> <p>Sure that this control only functions with a battery present. Should you drive without battery but still connect the wire, you will see that the light glows even as the generator generates voltage. So without battery, do not connect it.</p>
<p>The charge light control function is based on a transistor switch and is an additional function. Even if that should fail, the regulator might still be in ok working condition. Simple check: have the engine running, turn lights on, disconnect the battery. If you have bright lights the unit is ok.</p>	
<p>* Regulator type 2: with DC regulator with built in smooting condenser (73 00 799 50), use additional the wiring diagram reg_102:</p>	
	 <ul style="list-style-type: none"> • the 2 black (sw) wires are the AC input from the alternator (as it is AC it does not matter which black to which black) • the red (rt) wire is the 12V DC output plus • the brown (br) wire is ground, internally connected to housing
<p>* Remains the blue (sometimes blue/white) wire at the ignition coil. This is the kill (cut-off) wire.</p>	<p>Switch off via separate kill switch <u>(when driving without battery):</u> The relay will not be fitted. The blue(/white) cable of the ignition coil will be connected to a kill switch, closing against ground (a button at the handlebars). Or you mount an ignition lock</p>
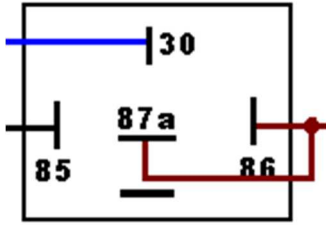
<p>Connected to ground - it will stop ignition!</p> <p>Note: Should you experience ignition failures, disconnect as a first measure this blue wire. In many cases that will permit you to get mobile again (particulars see: technical help)!</p>	<p>that has a facility to connect against ground when in OFF position.</p> <p>Battery method: Connect the brown relay wire to good ground. Lead the longer black wire from the relay to the wire that did run previously to a pin carrying voltage when the switch is on (in German bikes: pin 15) and connect it there. Connect the blue wire from pin 30 of the relay to the blue(/white) wire at the new ignition coil. should your battery fail on the road, just disconnect that blue wire and your bike will run again (it will now only not stop by switching off).</p>
<p>Relay wiring (if used):</p> 	<p>The brown wire with the ring terminal from pins 87a und 86 goes to ground.</p> <p>The black wire from pin 85 goes to a main switch terminal carrying voltage if switched on.</p>
<p>Screw the high tension (ignition) cable ...</p> <p>* Please do not use any spark amplifying cables, such as "Nology supercables" or "hot wire". This will disturb the system and possibly damage it.</p>	<p>... into the ignition coil and pull over the rubber seal before mounting the coil (it will be easier).</p> <p>Please do use the cable arriving with the pack and not any old cable.</p>
<p>You will do yourself a favour to treat your bike to new spark plugs and spark plug sockets (preferably some between 0-2kOhm). Plenty of problems are to be traced back to "apparently good" (even completely "brand-new") sparks plugs, terminals and cables. Do not use spark plugs with an intern suppression resistor. NGK (e.g.) offered such spark plugs coded with an "R" (for resistor).</p>	
<p>* Finally - and before installing the battery and before the first kickstart - please re-check carefully all connections and fitments against the wiring diagram. Do check battery and light bulbs for correct voltage (12V).</p> <p>Should something not work, please consult our trouble-shooting guide on our homepage. As a first step disconnect the blue wire from the coil and re-test.</p>	
<p>* IMPORTANT: During crank shaft repair the dynamo shaft is often machined and gets shorter. The result is a rotor sitting lower, possibly touching now with its rivets the stator coil. The result is a destroyed stator and ignition failure. For more detail and how to check see (online) here.</p>	

Important safety and operating information

	<p>Safety first! Please observe the general health and safety regulations motor vehicle repair (MVR) as well as the safety information and obligations indicated by the manufacturer of your motorcycle.</p> <p># The timing marks on the material are for general guidance only during first installation. Please check after assembly by suitable means (stroboscope) that settings are correct to prevent damage to the engine or possibly even your health. You alone are responsible for the installation and the correctness of settings.</p>
	<p><u>Ignition systems generate high tension!</u> With our material right up to 40,000 Volts! This may, if handled carelessly, not only be painful, but outrightly <u>dangerous</u>. Please do keep a safe distance to the electrode of your spark plug and open high tension cables. Should you need to test spark firing, hold the spark plug socket securely with some well insulating material and push it firmly to solid ground of the engine block.</p> <p># Never pull sparkplug caps when engine is running. Wash your vehicle only with engine at standstill and ignition off.</p>
	<p># Should you have received in the kit HT cables with a fixed rubber boot(which does not contain a resistor) you might have to use spark plugs with an inbuilt resistor (or replace the cap with one containing a resistor) to comply with your local laws.</p>
	<p># After installation, please <u>check tightness of all screws, even those preinstalled</u>. If parts get loose during run, there will be inevitably damage to the material. We pre-assemble screws only loosely.</p>
	<p>Give the newly installed system a chance to work, <u>before you start to check and test values</u>, or what is worse apply changes to it.</p> <p>Our parts have been checked before delivery to you. You will not be able to check much anyway. At any rate do refrain from measuring the electronic components (such as ignition coil, regulator and advance unit). You risk severe damage to the inner electronics there. You will not get any tangible results from the operation anyway. Bear in mind that also your carburetor, your spark plugs and spark plug sockets (even if completely new) might be the reason for malfunction. The general experience with our systems is that the carburetor will have to be re-adjusted to lower settings. Should the system not start after assembly, first disconnect the blue (or blue/white) cut-off wire directly at the ignition coil (or in some cases advance unit) to eliminate any malfunction in the cut-off circuitry. Check ground connections carefully, make sure there is a good electrical connection between frame and engine block.</p> <p># In case of troubles, please consult our Knowledge Base first before you send off the material to us for checking</p>
	<p># The spark of classic, points based ignition systems has with about 10,000 Volts comparatively little energy and looks therefore yellow and fat (which however makes it highly visible). The spark from our system is a high energy spark with up to 40,000 Volts and therefore is needle thin focused in form, and blue in colour, which makes it not so visible. Furthermore you get spark only at kick-start operated speeds and not by pushing the kick-lever down slowly with your hand (as you might get with battery based ignitions).</p>

#	Systems using a twin outlet ignition coils have a few peculiarities. Please observe that during tests on one side, the other has either to be connected to an fitted spark plug or securely earthed/grounded. Otherwise there will be no spark on either side. Also with such open exits long and dangerous sparks may fly all over the coil.
#	Never do electric arc welding on the bike without completely disconnecting all parts containing semiconductors (ignition coil, regulator, advance) stator and rotor need not be taken off. The same is true for soldering. Before touching electronics disconnect the soldering iron from mains! Never use copper putty on spark plugs.
#	Electronics are very sensitive to wrong polarity. After work on the system, do check correct polarity of the battery and the regulator. Wrong polarity creates short circuits and will destroy the regulator, the ignition coil and the advance unit. As a rule, wiring will always be colour to colour. Instances, where colour jumps between wires are expressly mentioned in our instructions.
#	When you handle the new rotor, take care not to damage its magnets. Refrain from direct blows to the circumference of the rotor. When transporting never put the rotor over the stator. Observe our information relative to transport of the material.
#	Do not use spark plug sockets with a resistance of more than 5kOhm. Better use 1 or 2kOhm ones. Bear in mind that spark plug sockets do age and thereby increase their internal resistance. Should an engine start up only when cold, a defective spark plug socket and/or spark plug is very probably the cause. In case of problems check high tension cables too. Never use carbon fibre HT-cables, never use so called "hot wires" which promise to increase spark.
#	It is a good idea to cover the rotor in a thin layer of oil to reduce the risk of corrosion.
#	Never use a claw puller or a hammer to disengage the rotor. Its magnets might become loose in the event. We offer a special puller for disengaging the new rotor again (see assembly instruction)!
#	Should the motorcycle not be in use for some longer period, please disconnect the battery (so existing) to prevent current bleeding through the diodes of the regulator. Though, even a disconnected battery will empty itself after a while.
#	Please do observe these remarks, but at the same time, don't be afraid of the installation process. Remember, that before you, thousands of other customers have successfully installed the system. <i>Enjoy driving your bike with its new electric heart!</i>

Schaltplan 91xr12 (wiring diagram)

